KI-234 R66 Cabin Bulkhead Doubler Installation Kit Instructions

To repair a crack in F259-2 cabin bulkhead panel near right side F020-1 upper frame assembly attachment

CAUTION

Visit www.robinsonheli.com to verify kit instructions are current revision. Review instructions before installation; contact RHC Technical Support with questions. Verify kit contents match list; contact RHC Customer Service if parts are missing or damaged.

| ITEM NUMBER | PART NUMBER | DESCRIPTION | QTY PER KI-234 |
|----------------|---------------|------------------------------------|-------------------|
| | | KIT CONTENTS | |
| 1 | KI-234 Instr. | Kit Instructions | 1 |
| 2 | F003-22 | Insulation – RH | 1 |
| 3 | G803-2 | Doubler (Revision B or subsequent) | 1 |
| 4 | NAS9301B-4-02 | Rivet | 3 |

Special Tools

• Blind rivet installation tool and clecos (sheet metal fasteners)

Consumables

B270-1 & B270-8 sealant

KI-234 Kit Instructions

- 1. Refer to Figure 1. If installed, remove F003-22 (RH) insulation (located on aft side of F259-2 cabin bulkhead panel) per R66 Maintenance Manual (MM) § 25-40.
- 2. If crack can be stop-drilled at each end without removing F020-1 upper frame assembly, remove F006-1 main rotor gearbox assembly per MM § 63-20. If crack cannot be stop-drilled at each end, remove upper frame per MM § 53-33.
- 3. Drill a 0.098 inch diameter hole at each end of crack in cabin bulkhead panel. Deburr holes.
- 4. Remove two existing rivets shown; leave holes empty.
- 5. Using G803-2 doubler as template, match drill (3) 0.130 inch diameter holes thru panel. Deburr holes and clean up debris.
- 6. Cleco (sheet metal fastener) doubler to panel. Progressively remove clecos and install (3) | NAS9301B-4-02 rivets. Verify rivet and doubler security.
- 7. Install upper frame per MM § 53-33, step 1, if removed. Apply small bead B270-1 sealant at seams | where doubler attaches to panel and where frame attaches to doubler.

KI-234 Kit Instructions (continued)

- 8. If removed, install supplied insulation per MM § 25-40 and Figure 1, and seal along top edge using B270-1 sealant.
- 9. Install upper frame per MM § 53-33, steps 2 thru 16, if removed, or install main rotor gearbox per MM § 63-20.
- 10. Make appropriate maintenance record entries. No change to helicopter weight and balance.

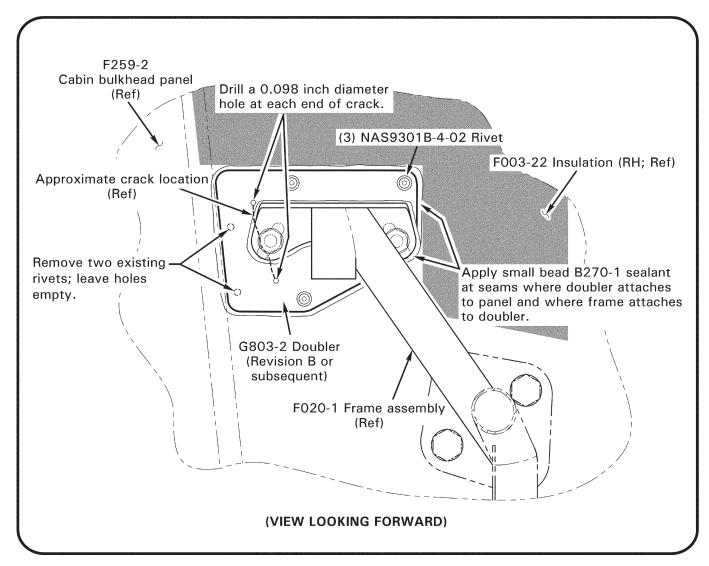


FIGURE 1