

CHAPTER 8
WEIGHT AND BALANCE

<i>Figure</i>	<i>Title</i>	<i>Page</i>
8-1	Ballast Installation	8.0

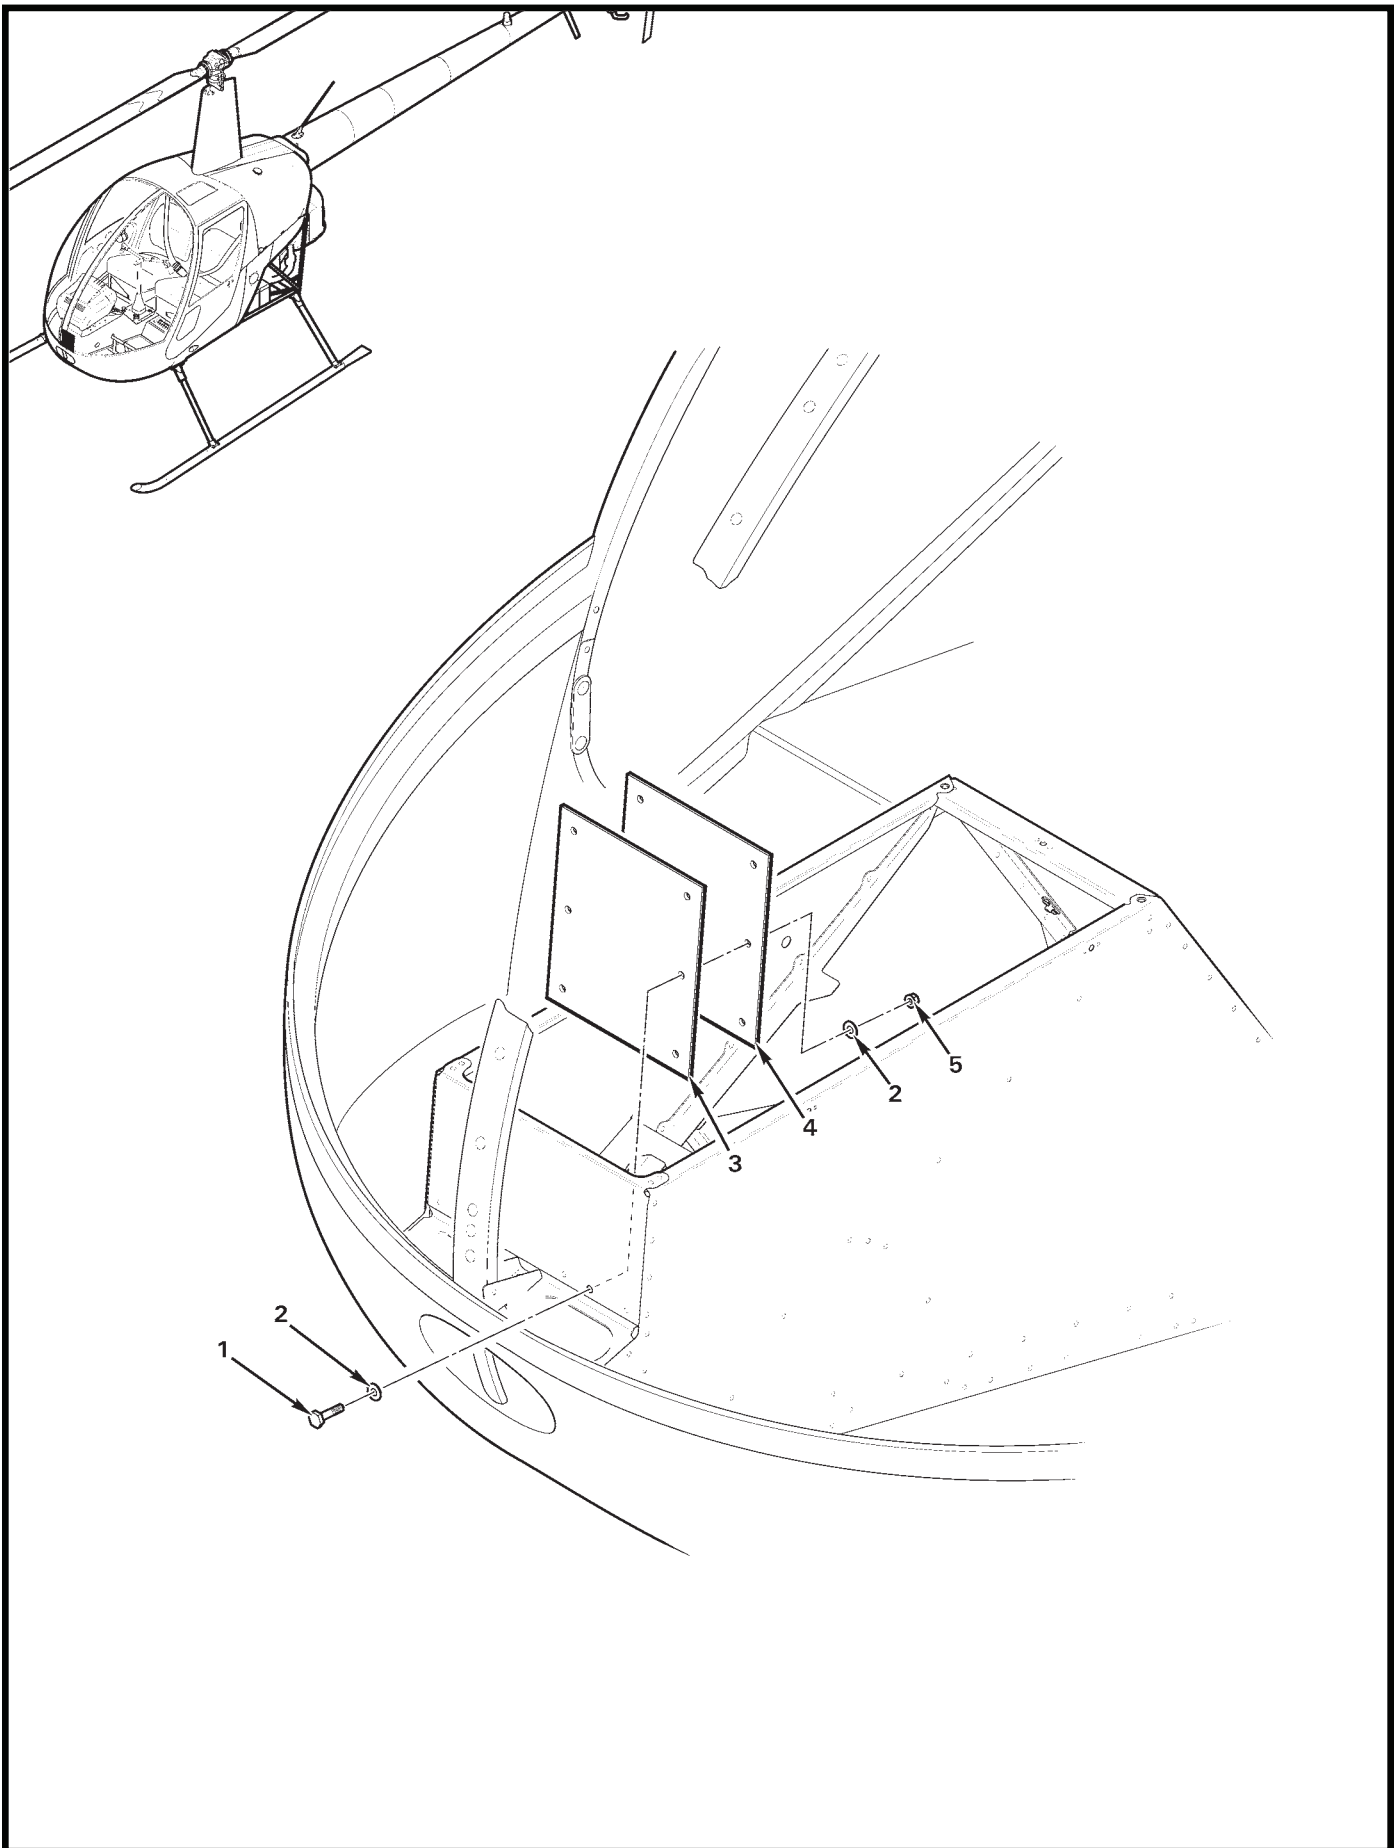


FIGURE AND INDEX NUMBER	PART NUMBER	DESCRIPTION	PARTS AVAIL	QTY PER ASSY
BALLAST INSTALLATION				
8-1-1	NAS6603 *	Bolt	X	2
2	NAS1149F0332P	Washer	X	4
3	A941-3	Plate – Ballast (1.0 lb)	X	A/R
4	A941-2	Plate – Ballast (0.25 lb)	X	A/R
5	MS21042L3	Nut	X	2

NOTES * Select bolt length which, after correct torque is applied, exposes 2 to 4 threads beyond nut.

Intentionally Blank